


# SONIC TOOTHBRUSH **T5**
# INSTRUCTION MANUAL

Save these instructions for household use only.
Please read carefully before use:

- This product has no user serviceable parts.
- Store the charging unit onto a dry and safe place when it is not in use.
- Untwist the power cord before use.
- In case of breakdown or malfunction, do not dismantle, exchange or manipulate any part of the product, to avoid the risk of an electric shock. Please contact the after-sales service.
- If the supply cord is damaged, it must be replaced by the manufacturer in order to avoid a hazard. Please contact the after-sales service.
- If the product is dropped, the brush head should be replaced before the next use even if no damage is visible

## PRODUCT DETAILS

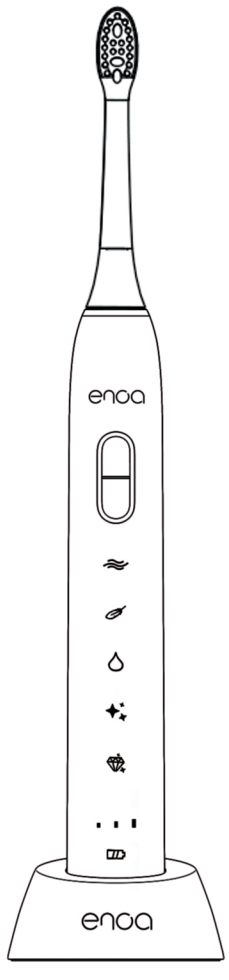




## TECHNICAL SPECIFICATIONS

| | |
|---|---|
| Model: | T5 |
| Product Type: | Sonic Electric Toothbrush |
| Charger Input: | DC5V ⎓ 1A |
| Rated power: | 3.0V - 4.2V ═ 1.8 W |
| Brushing Modes: | 5 Modes ( Clean, Sensitive, |
| | Massage, White, Polish ) |
| Battery Type: | 800 mAh Li-ION Battery |
| Product Size: | 60 x 62 x 269 mm |
| Product Weight: | 245 g |
| Waterproof Certification: | IPX 7 |

## PACKAGE CONTENT

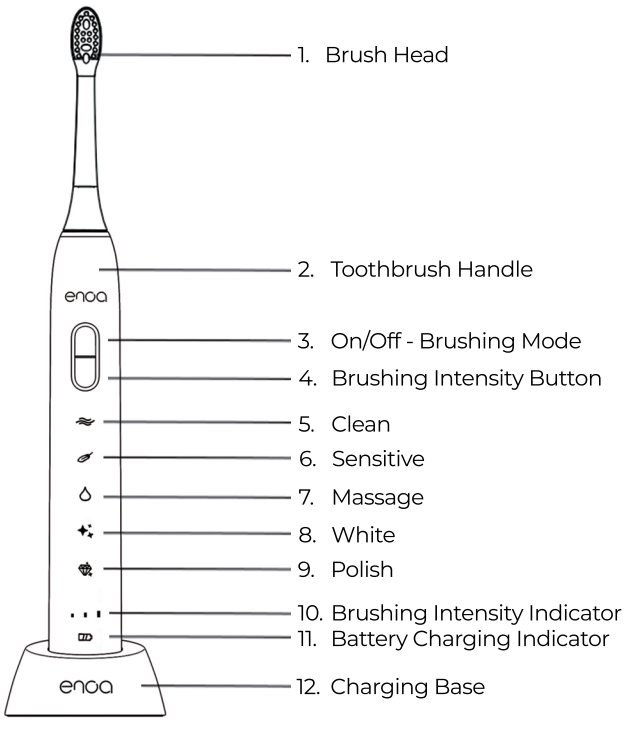- Toothbrush Handle
- Replacement Heads (2 Units)
- USB Cable
- Travel Case
- Instruction Manual

- Toothbrushes can be used by children and people with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction regarding the safe use of the appliance and the possible dangers. Cleaning and maintenance should not be done by children without supervision.

- Children shall not play with the appliance.

- The power cord cannot be replaced. If the cable is damaged, the appliance should not be used.

- The appliance is to be used only with the charger and power cord supplied.



## IMPORTANT SAFETY INSTRUCTIONS

T5 Sonic Toothbrush has been carefully designed to offer you and your family a new and unique brushing experience, which is both safe and effective.

However, when using the electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

To reduce the risk of electrocution:

1. Always unplug the product immediately after using.
2. Do not use while bathing.
3. Do not place or store the product where it can fall or be dragged into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Do not use and unplug immediately the product that has fallen into water.

To reduce the risk of fire, electric shock, or injury:

- Unplug the appliance from outlet when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it has been dropped, damaged, left outdoors, or dropped into water, returning it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners
- Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands
- Turn off all controls before unplugging.
- Never block the air openings of the product or place it on a soft surface, such as a bed or couch, where air openings may be blocked. Keep the air openings free of lint, hair and similar.
- Never use while sleeping or drowsy.
- Never drop or insert any object into any opening or hose
- Do not use outdoors or operate where aerosol products are being used or where oxygen is being administered.
- Connect this product to a properly grounded outlet only. See grounding instructions.



## CONNECTING AND CHARGING

- T5 has a waterproof handle. It is electrically safe and is designed for use in the bathroom. But it's not meant to be used underneath the water.
- Plug the adaptor into an electrical outlet and put the brush handle on the charging base, the charging indicator should be lit.
- Full charge needs 12 hours (16 hours the first charge), this enables 30 days brushing.
- Battery Charging Indicator turns red and flashing when battery is low. Charging Indicator keeps flashing red when charging, and turns green when fully charged.
- Pull plug out of outlet for saving energy, or leave it and keep the brush on charging base, there is no risk of overcharging of battery.
- If not used for a long time and when you charge it, the Charging Indicator will not light up immediately. After pre-charging 30 minutes approximately, the Battery Charging Indicator will light up.

## IMPORTANT INFORMATION

This product contains rechargeable battery. In the interest of protect the environment, please do not dispose the product in the household waste at the end of its useful life. Disposal can be done at appropriate collection points provided in your country.

## HOW TO USE

Before use, please insert the Brush Head on the product. You can use any kind of toothpaste. To avoid splashing, bring the Brush Head closer to your teeth before switching the appliance on.

## BRUSHING TECHNIQUE

- Guide the Brush Head slowly from tooth to tooth.
- Hold the Brush Head in place for a few seconds before moving on to the next tooth.
- Brush the gums as well as the teeth. Start with outside of the teeth, then the insides, ending with the chewing surfaces.
- Do not scrub or press hard, simply let the brush do all the work.

## TWO MINUTES AUTO TIMER

T5 is designed to reach the proven and best brushing timing. After two minutes of brushing, the device stops automatically.



## BRUSHING MODES

T5 offers different brushing modes and intensity for various oral care needs:

- **Clean** - Brush Head in high frequency, remove bacteria on teeth.
- **Sensitive** - For sensitive teeth and gums, brushing your teeth in gentle frequency.
- **Massage** - Brush teeth in extremely gentle frequency.
- **White** - Clean and Polish mode switching continuously and whitening teeth.
- **Polish** - High strength and high frequency, polishing and brightening teeth.

- Press On/Off Button for 5s to power on the product and start the operating sequence. Press On/Off shortly to switch between the Brushing Modes in sequence (clean mode, sensitive mode, massage mode, white mode, polish mode, power off). Press On/Off Button for 5s to switch off the product.
- Each mode can be adjusted to three different intensity levels (Low, Mid, High) by pressing the Brushing Intensity Button in sequence.
- The product automatically starts in the clean mode when pressing On/Off Button once. To shift to another mode, press On/Off - Brushing Mode button a second time.
- When a Brushing Mode is selected, the corresponding indicator will light on.
- 1 minute in Polish Mode, 2 minutes in Clean, Sensitive, Massage and White Modes and 30s interval time are recommended.

## CLEANING RECOMMENDATIONS

- After brushing, rinse your Brush Head thoroughly under running water.
- Remove the Brush Head from the handle and clean both parts separately under running water. Then wipe them dry before putting the handle onto the charging unit.
- Before cleaning your charging unit, make sure to unplug the adaptor. Only use a dry or damp-dry cloth to wipe the surface of the charging unit.
- Place the charging unit onto a dry and safe place.
- Do not plug in the charging unit until it is completely dry
- Important: do not clean the charging unit under running water or immerse it into water. Place the charge station on a dry and safe place.